



PARING AN EPSON HIP PRINTER

HONEYWELL

1. Ensure the only printer powered on is the printer that will be paired with the handheld computer.
2. From your handheld:
 - a. START MENU→SETTINGS→BLUETOOTH→if there is an old printer in the menu, click and 'hold' on that printer and DELETE (most likely named 'BT304'→ADD NEW DEVICE→when printer is found (i.e. BT304), highlight and NEXT→enter passcode of '4254' (for grey Epsoms) or '0000' (for black Epsoms)→NEXT (should successfully add your printer)→ADVANCED→'check' the box labeled 'Serial Port'→SAVE
 - b. From same menu: COM PORTS tab→NEW OUTGOING PORT→NEXT→from the 'Port' dropdown menu, select COM 4→uncheck 'Secure Connection'→FINISH (close out this Bluetooth menu if it is not already)→OK
3. Your printer should now be paired with the handheld computer:
 - a. To test print, from your 5050 program: SETUP→TEST PRINTER
 - b. In order to load the latest draw info and ticket logo, you may need to load the draw's latest settings: SETUP→GET APP'S SETTINGS AND EVENTS
 - c. If printer does not print yet, START MENU→5050 program→SETUP→EDIT DEVICE SETTINGS→click on 'KB' and the 'copyright' symbol→enter access code of 'f50mdd' or 'f50mmdd (i.e. 'f50925' for September 25th or 'f501012' for October 12th; m=month, d=date)→click on the green circle→highlight the 'printer port' dropdown and select COM7→OK